

USER'S MANUAL

Digital Satellite Finder

FRONT PANEL

RF-IN:

Satellite signal input

USB-Port:

USB port for PC connection and
DC 5V power supply
connection



Switch:

Switch finder on/off

Charging-LED :

Red: The battery is being
charged

Off: The battery is full

INSTRUCTION

S: Select satellite

Use [◀] [▶] buttons to switch between
satellites

L: Select LNB Type

Use [◀] [▶] buttons to select the default
LNB LO frequency , The LNB LO frequency
must be the same as the LNB on the antenna

T: Select Transponder

Use [◀] [▶] buttons to select the transponder

Mute: Press and hold the [▶] button
for 2 seconds

LNB Power OFF:

Press and hold the [▼] button for 2 seconds

TECHNICAL SPEC

Input level : -65dBm ~ -25dBm Input Impedance 75R

Input Frequency:950~2150MHz

Professional strap included

Support DVB- S/S2

Support QPSK,8PSK,16APSK,32APSK

Automatically identify DVB S and S2 signals

Professional shock protects case

Upgrade software & parameters through USB2.0 Port

High capacity LI-ION battery
